



QUICK CARD

Using the Apple Mobile Tech App

This quick card outlines how to use the Mobile Tech App (MTA) on an Apple smartphone or tablet to download test reports from an OneAdvisor 800 (ONA-800) network tester .

ENABLE BLUETOOTH ON THE OneAdvisor 800

1. Press {Home} and tap the System icon on the ONA-800.
2. Tap the Bluetooth Icon
3. Check "Enable Bluetooth"
4. Check "Allow other devices"

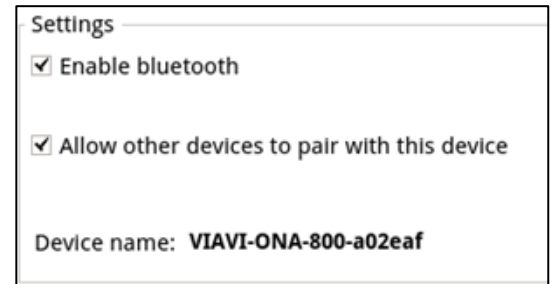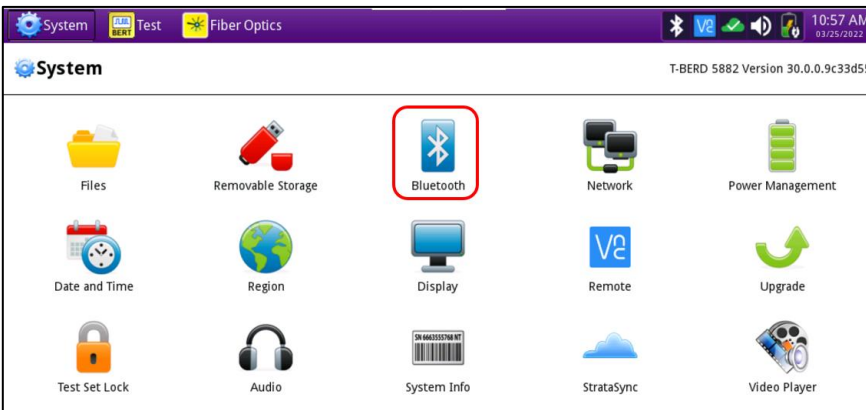

PAIR Apple WITH OneAdvisor 800

1. In the Apple device, Opens Setting and Bluetooth. Search for the Viavi-ONA-800-xxxx
2. Search for the Viavi-ONA-800-xxxx
3. Connect to the Viavi-ONA-800-xxxx.






QUICK CARD

LAUNCH THE MOBILE TECH APP ON Apple


LAUNCH THE MOBILE TECH APP ON Apple

1. From the App Store, search for “Viavi”.
2. Install and open **Mobile Tech**
3. Select **[LOCAL MODE]**.
4. Select **[VIAVI-ONA-800-xxxx]**.

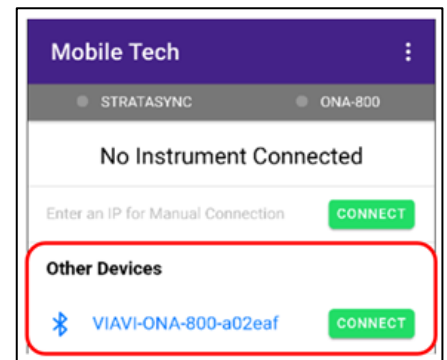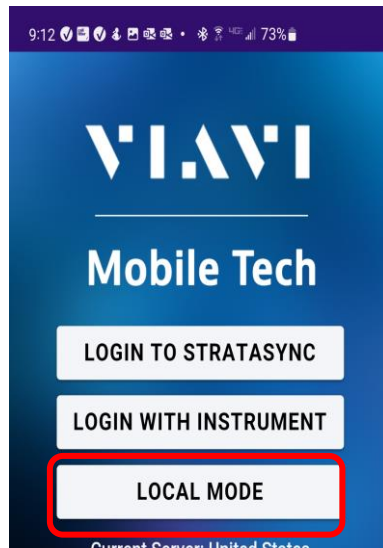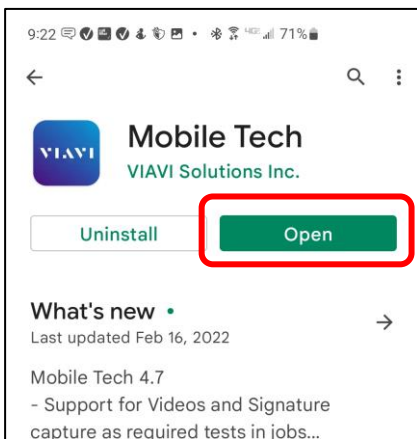


DOWNLOAD REPORT(S) FROM THE OneAdvisor


1. Press the **ONA-800 Files** button.

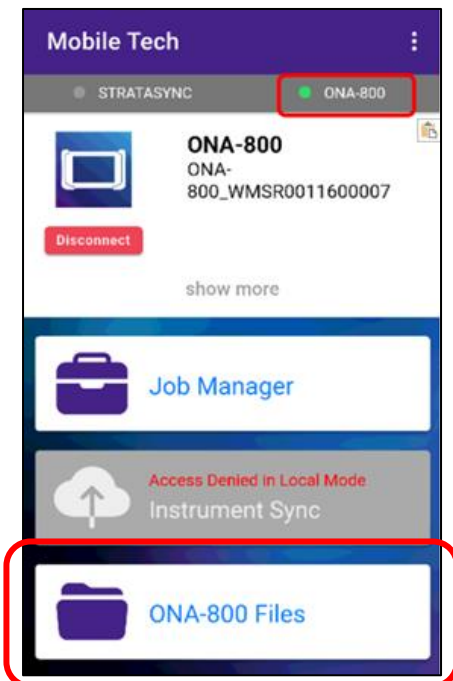



2. Select the “**Radio Analysis or CAA**” folder.




3. Select the “**Internal**” subfolder.



4. Press a down-arrow  to download the test report.


5. A green checkmark  indicates the file has been downloaded.

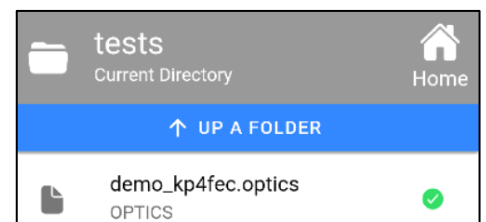


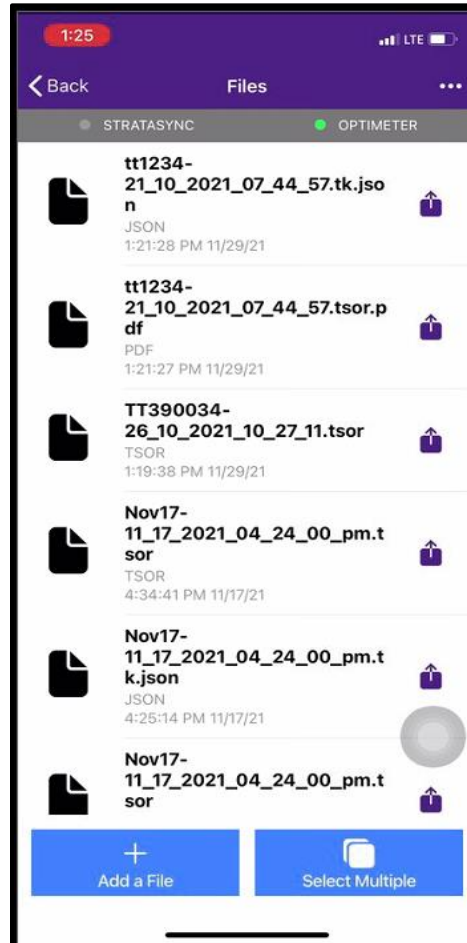
QUICK CARD

EMAIL THE TEST REPORT


1. To email a file from the Mobile Tech app, press **<Back>** to return to main menu.
2. Press [**Mobile Tech Files**] to view downloaded files.

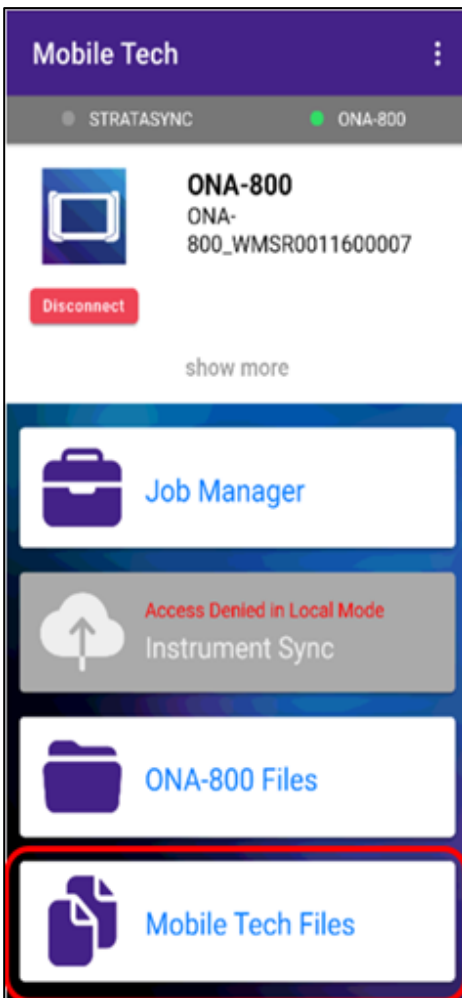


3. Press the up-arrow  next to the desired file.



4. In pop-up, choose [**Export to another app**]

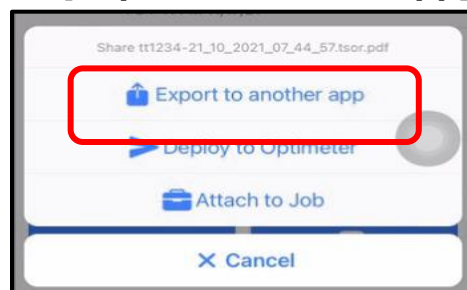

5. Select preferred method to send file: email, text, etc.

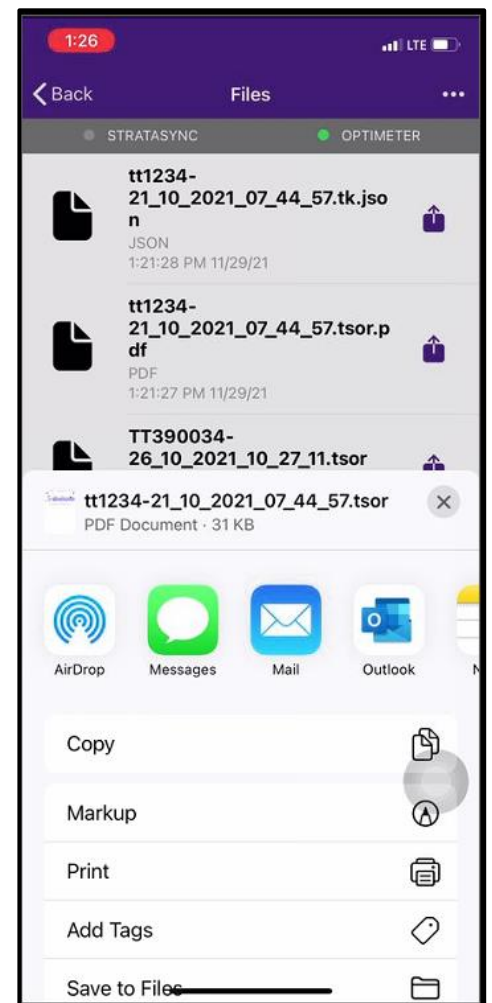

6. Send the file using the selected application.